303-08A-4



Puma/3.2L Duratorq-TDCi (148kW/200PS) - Puma





## REMOVAL AND INSTALLATION

Exhaust Gas Recirculation (EGR) Valve — 2.2L Duratorq-TDCi (88kW/120PS) - Puma/2.2L Duratorq-TDCi (96kW/130PS) - Puma/2.2L Duratorq-TDCi (110kW/150PS) - Puma(23 312 0)

## **General Equipment**


Hose Clamp Remover/Installer

## Removal


**NOTE**: Removal steps in this procedure may contain installation details.

- Refer to: Cooling System Draining, Filling and Bleeding - 2.2L Duratorq-TDCi (88kW/120PS) - Puma/2.2L Duratorq-TDCi (96kW/130PS) -Puma/2.2L Duratorq-TDCi (110kW/150PS) -Puma/3.2L Duratorq-TDCi (148kW/200PS) -Puma (303-03 Engine Cooling - 2.2L Duratorq-TDCi (88kW/120PS) - Puma/2.2L Duratorq-TDCi (96kW/130PS) - Puma/2.2L Duratorq-TDCi (110kW/150PS) - Puma, General Procedures).
- 2. Refer to: Cowl Panel Grille (501-02 Front End Body Panels, Removal and Installation).
- **3.** Refer to: Lifting (100-02 Jacking and Lifting, Description and Operation).
- **4.** Refer to: Wheel and Tire (204-04 Wheels and Tires, Removal and Installation).


5.

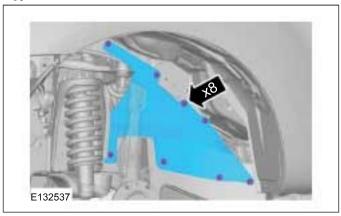

**6.** General Equipment: Hose Clamp Remover/Installer

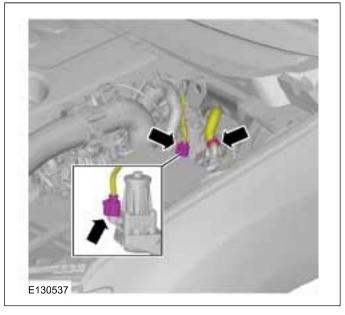

7. 1. Torque: <u>10 Nm</u>
2. Torque: <u>24 Nm</u>

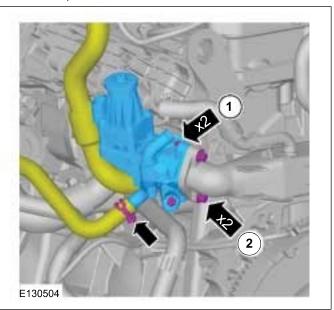

## Installation

**NOTE:** Install all the bolts finger tight before final tightening.

**NOTE:** Make sure that new gaskets are installed.

**1.** To install, reverse the removal procedure.



