


DESCRIPTION AND OPERATION

Exhaust System – Component Location

NOTE: Exhaust flexible pipes are very fragile and must not be subjected to any load. They must be secured against twisting and bending during any work on the exhaust system.

Vehicles with diesel particulate filter & catalytic convertor

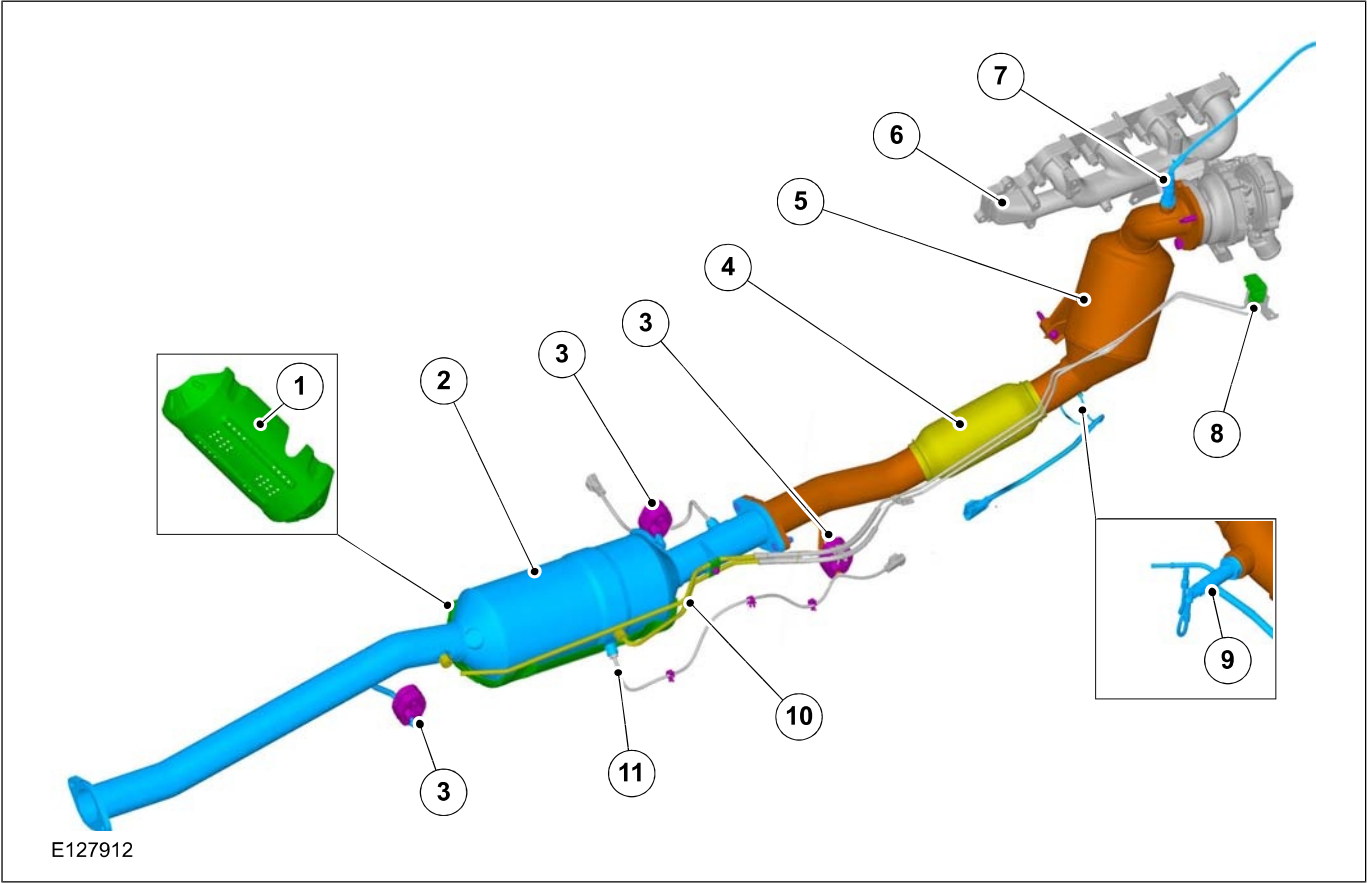

Item	Description
1	DPF Heat shield
2	DPF
3	Exhaust hanger insulator
4	Exhaust flexible pipe
5	Catalytic converter

Item	Description
6	Exhaust manifold
7	Temprature sensor
8	Pressure differential sensor
9	Fuel vapourizer
10	Pressure differential sensor lines
11	Temprature sensor